

Recommendations for the replacement of individual damaged BritLock Slates

1. Carefully remove remains of damaged slate and fixing nails. If necessary saw off the nails flush with the slate battens.
2. Apply continuous bead of adhesive to top interlock of replacement BritLock slate, across full width of slate. Suitable adhesive can be obtained from local roofing or builders merchants.
3. Apply continuous bead adhesive to side interlock of replacement BritLock slate, along full length of slate.
4. Carefully insert replacement BritLock slate into roofing, pressing surrounding slates onto adhesive.
5. Drill a hole through the tail of the replacement slate, passing through the head of the slate below and into the timber batten of the slate below. Secure replacement slate using a 45 x 4mm long stainless steel screw and sealing washer.

Note: The above recommendations are for replacing individual BritLock slates only. All surrounding BritLock slates must be correctly fixed in accordance with the usual Manufacturers' recommendations.

For more information please contact Sandtoft Technical Support on 0844 9395 999.

August 2010